



Product information
Flow – Filtration



Characteristics

System

- Filter

Pore size

- 5..600 µm

Nominal widths

- DN 4..80

Media

- Water, Oil, Gas

Pressure resistance

- max. 16 bar


Temperature

- -20..+110 °C

Function and benefits

The Honsberg filters are offered for the protection of the devices from dirt or as independent components for coarse and fine filtration of liquids.

The fine filter [ZE] has filter cartridges with a fineness range starting from 5 µm made of sintered plastic or stainless steel and are capable for use in fine filtration areas..

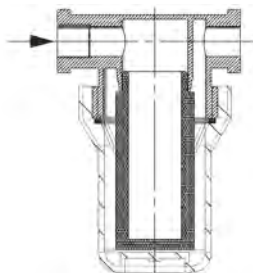


A standard dirt trap will only be able to fulfil part of its protective function when ferritic abrasion is present in the medium, where the grain sizes are considerably smaller than the pore size of the dirt trap and will thus be rinsed through the dirt trap sieve.

Applications

- Lubrication and cooling circuits
- Heating technology
- Protection for flow switches or flow meters

For this situation, Honsberg magnetic filters [ZV] offer an additional level of protection with the arrangement of a magnetic wand in the centre of the dirt trap screen. This wand is provided with a pair of shielded magnets and separates the ferritic foreign matter..

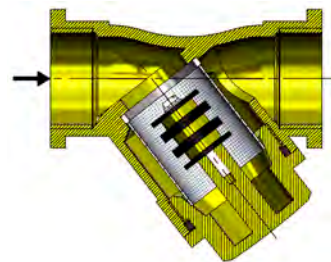

The individual magnet pairs are poled and shielded against one another by soft iron discs, so that an optimal magnetic field is created in the area of the sieve and a higher degree of efficiency is assured as a result.

The connection of the magnetic wand to the cover of the dirt traps makes the cleaning of the magnetic wand in the course of maintenance tasks problem-free.

Device overview

Device	System	Pore size	Nominal widths	Pressure resistance in bar	Medium temperature	Media	Seite
ZE	Fine filter	5..300 µm	DN 4..20	PN 10	0..52 °C	Water, oil, gas	4
ZV	Magnetic filter	250..600 µm	DN 15..80	PN 16	-20..+110 °C	Water, oil	5

Errors and technical modifications reserved.

Fine Filters ZE



- Filter 5..300 µm
- Simple to clean
- Transparent or opaque cover

Characteristics


The fine filters are intended for filtration of liquids and gasses. Filter cartridges with different mesh sizes are available.

Technical data

Nominal width	DN 4..20
Process connection	female thread BSP 1/8..BSP 3/4 (note: for plastic parts it is not possible to guarantee trueness of calibration)
Pore size	5..300 µm
Pressure resistance	10 bar at 24 °C 7 bar at 52 °C
Media temperature	0..+52 °C
Ambient temperature	0..+52 °C
Materials medium-contact	Housing PP Cover PP, Copolyesters (PES) or Polyamide Filter UHMV-PE sintered plastic or stainless steel Seal NBR or FKM
Medium	water, oil, gas
Weight	see table "Dimensions and weights"
Installation	Mounting of filter cup towards bottom. Renew seal at de-assembly of filter cup for filter change.

Dimensions and weights

G	Type	H	L	D	X	Weight kg
BSP 1/8	ZEK-004	50	77	48.5	19	0.050
	ZEL-004	84				0.075
BSP 1/4	ZEK-008	50				0.050
	ZEL-008	84				0.070
BSP 3/8	ZEK-010	54	91	75.0	20	0.065
	ZEL-010	88				0.085
	ZEG-010	114				0.175
BSP 1/2	ZEK-015	54	77	48.5	19	0.060
	ZEL-015	88				0.080
	ZEG-015	114				0.170
BSP 3/4	ZEG-020	119	91	75.0	20	0.190

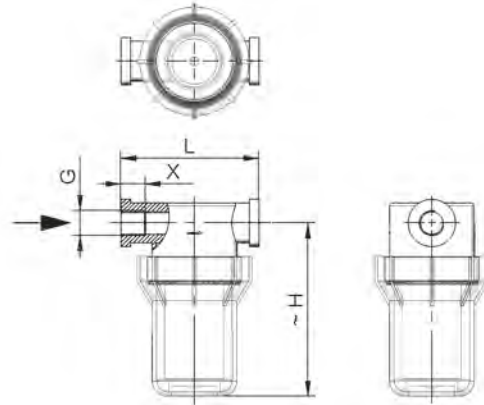

Ordering code

1. 2. 3. 4. 5. 6. 7.
ZE - **G** **P**

1. Types			
K	short filter Ø18		
L	long filter Ø18		
G	large filter Ø28		
2. nominal width			
004	DN 4 - BSP 1/8		• • •
008	DN 8 - BSP 1/4		• • •
010	DN 10 - BSP 3/8		• • •
015	DN 15 - BSP 1/2		• • •
020	DN 20 - BSP 3/4		•
3. Process connection			
G	female thread		
4. Body			
P	PP		
5. Cup			
P	PP white		• • •
S	clear PES		• • •
N	Polyamide		• • •
6. Filter			
005	5 µm	sintered plastic	
035	35 µm		
080	80 µm		
050	50 µm	stainless steel	
100	100 µm		
300	300 µm		
7. Seal			
N	NBR		
V	FKM		

Magnetic Filter ZV-...GR



- Combination of magnetic separator and filter
- Simple to clean

Characteristics


Coarse dirt and floating particles, such as welding spatter, hemp particles, or other residues are trapped by the filter, and ferritic particles are retained by an integrated magnetic separator.

Technical data

Nominal width	DN 15..80
Process connection	female thread Rp 1/2" ..Rp 3"
Pore size	600 µm, optionally 250 µm
Pressure resistance	see table "Dimensions and weights"
Media temperature	-20..+150 °C
Ambient temperature	-20..+150 °C
Q_{max.}	Rp 1/2" - 2.3 m³/h Rp 3/4" - 2.7 m³/h Rp 1" - 4.4 m³/h Rp 1 1/4" - 5.1 m³/h Rp 1 1/2" - 7.0 m³/h Rp 2" - 11.9 m³/h Rp 2 1/2" - 18.4 m³/h Rp 3" - 30.0 m³/h
Materials medium-contact	Rg 5 / 6, CW614N, St37 WEMA-KOR coated, hard ferrite, 1.4401, It400
Medium	water, oil
Weight	see table "Dimensions and weights"
Installation location	screw connection should be underneath

Dimensions and weights

G	DN	PN bar	H	L	SW	S W1	X	Magnet s	Weight kg
Rp 1/2"	015	25	42	66	25	22	11	2	0.30
Rp 3/4"	020	25	50	77	31	27	14	3	0.40
Rp 1"	025	25	62	90	38	32			0.65
Rp 1 1/4"	032	25	78	112	47	41	16		1.05
Rp 1 1/2"	040	25	82	120	54	46			1.40
Rp 2"	050	25	95	150	66	56	20	4	2.20
Rp 2 1/2"	065	25	116	220	85	70	22	5	3.80
Rp 3"	080	16	140	250	100	75	25	4	5.80

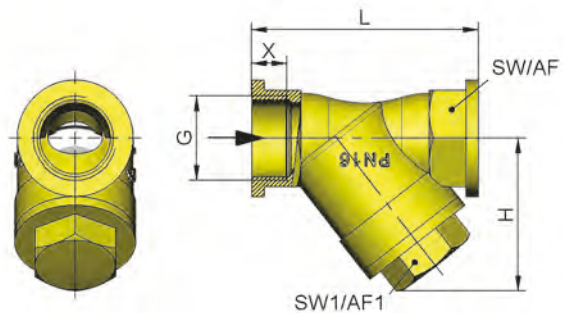

Ordering code

1. 2. 3.
ZV -

1. Nominal width	
015	DN 15 - Rp 1/2"
020	DN 20 - Rp 3/4"
025	DN 25 - Rp 1"
032	DN 32 - Rp 1 1/4"
040	DN 40 - Rp 1 1/2"
050	DN 50 - Rp 2"
065	DN 65 - Rp 2 1/2"
080	DN 80 - Rp 3"
2. Process connection	
G	female thread
3. Connection material	
R	red bronze

contact us



Headquarter

GHM Messtechnik GmbH
GHM GROUP CORPORATE
Tenter Weg 2-8
42897 Remscheid | GERMANY
Phone +49 2191 9672-0
info@ghm-group.de
www.ghm-group.de

Centers of Competences

GHM Messtechnik GmbH
GHM GROUP – Greisinger
Hans-Sachs-Straße 26
93128 Regensburg | GERMANY
Phone +49 9402 9383-0
info@greisinger.de | www.greisinger.de

GHM Messtechnik GmbH
GHM GROUP – Honsberg
Tenter Weg 2-8
42897 Remscheid | GERMANY

GHM Messtechnik GmbH
GHM GROUP – Martens
Kiebitzhörn 18
22885 Barsbüttel | GERMANY

GHM Messtechnik GmbH
GHM GROUP – Imtron
Carl-Benz-Straße 11
88696 Owingen | GERMANY

Delta OHM S.r.l. a socio unico
GHM GROUP – Delta OHM
Via Marconi 5
35030 Caselle di Selvazzano
Padova (PD) | ITALY
Phone +39 049 8977150
info@deltaohm.com
www.deltaohm.com

Valco srl
GHM GROUP – VAL.CO
Via Rovereto 9/11
20014 S. Ilario di Nerviano
Milano (MI) | ITALY
Phone +39 0331 53 59 20
valco@valco.it
www.valco.it

GHM GROUP International

Austria
GHM Messtechnik GmbH
Office Austria
Breitenseer Str. 76/1/36
1140 Vienna | AUSTRIA
Phone +43 660 7335603
a.froestl@ghm-messtechnik.de

Brazil & Latin America
GHM Messtechnik do Brasil Ltda
Av. José de Souza Campos, 1073, cj 06
Campinas, SP
13025 320 | BRAZIL
Phone +55 19 3304 3408
info@grupoghm.com.br

Czech Republic / Slovakia
GHM Greisinger s.r.o.
Ovci hajek 2/2153
158 00 Prague 5
Nove Butovice | CZECH REPUBLIC
Phone +420 251 613828
Fax +420 251 612607
info@greisinger.cz | www.greisinger.cz

Denmark
GHM Maaleteknik ApS
Maarslet Byvej 2
8320 Maarslet | DENMARK
Phone +45 646492-00
Fax +45 646492-01
info@ghm.dk | www.ghm.dk

France
GHM GROUP France SAS
Parc des Pivoles
9 Rue de Catalogne
69150 Décines-Charpieu (Lyon) | FRANCE
Phone +33 4 72 37 45 30
contact@ghm-group.fr

India
GHM Messtechnik India Pvt Ltd.
209 | Udyog Bhavan | Sonowala Road
Gurgaon (E) | Mumbai - 400 063
INDIA
Phone +91 22 40236235
info@ghmgroup.in | www.ghmgroup.in

Italy for Greisinger & Delta OHM
GHM GROUP – Delta OHM
Via Marconi 5
35030 Caselle di Selvazzano
Padova (PD) | ITALY
Phone +39 049 8977150
a.casati@ghm-messtechnik.de

Italy for Honsberg, Martens, Valco
GHM GROUP – Valco
Via Rovereto 9/11
20014 S. Ilario di Nerviano
Milano (MI) | ITALY
Phone +39 0331 53 59 20
alessandro.perego@valco.it

Netherlands
GHM Meettechniek BV
Zeeltweg 30
3755 KA Eemnes | NETHERLANDS
Phone +31 35 53805-40
Fax +31 35 53805-41
info@ghm-nl.com | www.ghm-nl.com

South Africa
GHM Messtechnik SA (Pty) Ltd
16 Olivier Street
Verwoerdpark, Alberton 1453
SOUTH AFRICA
Phone +27 74 4590040
j.grobler@ghm-sa.co.za

**...and more than
100 qualified distributors!**



Visit us at: **www.ghm-group.de**